



**BROWN & GAMMONS LTD**

Tel: 01462 490049 Fax: 01462 491940

[www.ukmgparts.com](http://www.ukmgparts.com)


[sales@ukmgparts.com](mailto:sales@ukmgparts.com)

## **MGF ELECTRIC MIRROR KIT (BGF1033) RIGHT HAND DRIVE FITTING INSTRUCTIONS**

1. Disconnect the earth cable from the battery.
2. Remove the driver and passenger door trim panels.
3. Disconnect the mirror heater connector on each door, then remove each mirror.
4. Remove the door speaker on both sides to allow better access.
5. Fit the new electric mirrors to each side, feed the connectors through to the inner door panel and connect the two way black connector back to the connector in 3 above.
6. Fit the new harness to the vehicle as follows. Feed each of the harness branches marked RH and LH to the appropriate doors, then through the door grommet, and plug up the terminals to the housing supplied as shown in diagram. Connect each of the connectors to the mirrors.  
(Note: if it is difficult to feed the harness through the door grommet then use some tape to tape up the terminals first and also make sure the grommet has been disconnected at both ends.)
7. Attach the earth eyelet to an appropriate earth point. Connect the red lead female connector to a spare position on the passenger compartment fusebox. (Note: if all 3 spare positions are occupied simply remove one and connect it to the male link on the new harness then connect the female back to the empty position.)
8. Using the template provided, cut a hole in the instrument binnacle which will accept the mirror switch. Feed the harness up and through the hole and connect it to the switch. Snap the switch into position.
9. Re-connect the battery and test for correct operation.
10. Replace all the trim removed during assembly.

LEFT HAND  
PASSENGER

1.	GREEN
2.	BLACK/BLUE
3.	BLANK
4.	BLANK
5.	BLACK/YELLOW
6.	GREY/WHITE

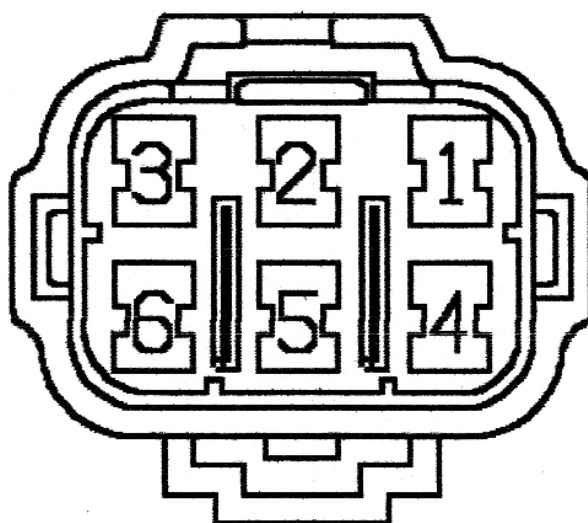

RIGHT HAND  
DRIVER

1.	BLACK/YELLOW
2.	GREY/WHITE
3.	BLANK
4.	BLANK
5.	GREEN
6.	BLACK/BLUE

**VIEWED FRONT FACE—i.e. LOOKING AT TERMINALS**



**BROWN & GAMMONS LTD**

Tel: 01462 490049 Fax: 01462 491940

[www.ukmgparts.com](http://www.ukmgparts.com)


[sales@ukmgparts.com](mailto:sales@ukmgparts.com)

## **MGF ELECTRIC MIRROR KIT (BGF1033) LEFT HAND DRIVE FITTING INSTRUCTIONS**

1. Disconnect the earth cable from the battery.
2. Remove the driver and passenger door trim panels.
3. Disconnect the mirror heater connector on each door, then remove each mirror.
4. Remove the door speaker on both sides to allow better access.
5. Fit the new electric mirrors to each side, feed the connectors through to the inner door panel and connect the two way black connector back to the connector in 3 above.
6. Fit the new harness to the vehicle as follows. Feed each of the harness branches marked RH and LH to the appropriate doors, then through the door grommet, and plug up the terminals to the housing supplied as shown in diagram. Connect each of the connectors to the mirrors.  
(Note: if it is difficult to feed the harness through the door grommet then use some tape to tape up the terminals first and also make sure the grommet has been disconnected at both ends.)
7. Attach the earth eyelet to an appropriate earth point. Connect the red lead female connector to a spare position on the passenger compartment fusebox. (Note: if all 3 spare positions are occupied simply remove one and connect it to the male link on the new harness then connect the female back to the empty position.)
8. Using the template provided, cut a hole in the instrument binnacle which will accept the mirror switch. Feed the harness up and through the hole and connect it to the switch. Snap the switch into position.
9. Re-connect the battery and test for correct operation.
10. Replace all the trim removed during assembly.

### LEFT HAND DRIVERS

1. GREEN
2. BLACK/BLUE
3. BLANK
4. BLANK
5. BLACK/YELLOW
6. GREY/WHITE

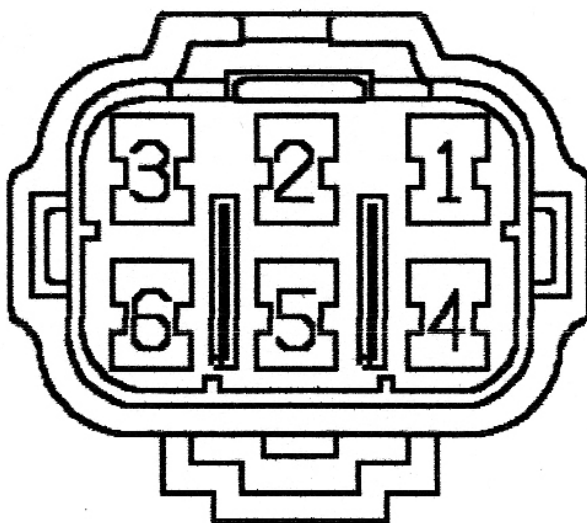

### RIGHT HAND

- PASSENGER
1. BLACK/YELLOW
  2. GREY/WHITE
  3. BLANK
  4. BLANK
  5. GREEN
  6. BLACK/BLUE

**VIEWED FRONT FACE—i.e. LOOKING AT TERMINALS**